


HP-6C(T)

Commercial Audio Solutions Ltd The Old Barn, Whitecroft Farm Strines, Derbyshire. SK22 3AH. Tel: 01663 767888 www.commercialaudiosolutions.com

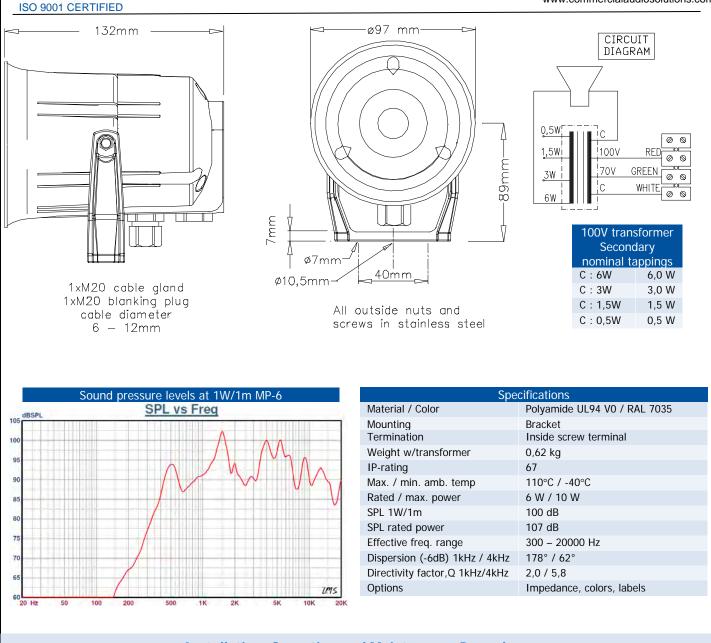

Installation, Operation and Maintenance Procedures

- Remove lid, lead cable through cable gland.
- Connect to terminal 70V: white green or 100V: white red.
- Select required power by changing the position of the black wire connected to the transformer; choose according to the label inside the loudspeaker.
- Fasten bracket with 1-3 screws.
- Fasten lid with a torque of 1,5 Nm.
- To change the position of the loudspeaker, please adjust the bracket (by loosening / tightening the screws) as required.
- For optimum performance, always use the correct voltage / power and operate within the frequency limits as stated.
- This loudspeaker is supplied with a two years warranty against defective materials and workmanship.