



E-mail......dnh@dnh.no Web-Site......www.dnh.no

DSP-15EExmN(M)T(MF)-MED

D

ENGLAND

DNH WW Ltd

Phone.....+ 44 1908 275 000

Fax.....+ 44 1908 275 100

E-mail.....dnh@dnh.co.uk

<u>GERMANY</u> DNH GmbH Phone... + 49 040 6569 30-0 Fax..... + 49 040 6569 30-30 E-mail...... dnh@dnh.de

DNH Speakers Inc

Phone......+ 1 484 494 5790 Fax.....+ 1 484 494 5793 E-mail..dnh@dnhspeakers.com



Installation, Operation and Maintenance Procedures

- Remove lid by four screws, lead cable through the cable gland and connect to terminal with required tapping.
- Every time the back lid is removed, check that the gasket is fitted correctly to the lid before you refit the back lid.
 Do not use any lubricants on the gasket.
- Screw lid back into place by four screws with a torque of 0,95-1,2 Nm to assure the IP rating.
- To change the position of the loudspeaker, please adjust the standard U-bracket (by loosening / tightening the screws) as required.
 Use only IECEx/ATEX certified "Ex eb" cable glands and blanking plugs reflecting the same IP rating and temperature range as the loudspeaker.
- Standard model delivered with two M20 Ex approved plastic blanking plugs.
- DSP-15EExmN(T) can be supplied with three different bracket systems, according to customer requirements.
- For optimum performance, always use the correct voltage / power and operate within the frequency limits as stated.
- Do not open loudspeaker when energized.
- This loudspeaker is supplied with two years warranty against defective workmanship.
- With internal temperature fuse.